



**GlobalTime Electronic Co., Ltd**

GlobalTime® NTP Analog Clocks  
Installation and User Manual



Add: Floor 7, Building 4, No. 651, Wanfang Road, Minhang District, Shanghai, China.

Tel: +86-21 3653 1186 Fax: +86-21 3653 1185

Web: [www.ntpclock.com](http://www.ntpclock.com)

Email: [contact@ntpclock.com](mailto:contact@ntpclock.com)

## Table of contents

<b>1. Introduction of NTP and PoE.....</b>	<b>1</b>
<b>2. Safety Instructions.....</b>	<b>1</b>
<b>3. Technical Specifications.....</b>	<b>1</b>
<b>4. Installation.....</b>	<b>2</b>
4.1. Packing List.....	2
4.2. Power Supply.....	2
<b>5. Working Status.....</b>	<b>2</b>
5.1. Localization.....	2
5.2. Standstill.....	2
5.3. Adjustment.....	2
5.4. Normal Working.....	2
5.5. Loss of synchronization.....	2
<b>6. Configuration.....</b>	<b>3</b>
6.1. Configuring an IP Address.....	3
6.2. Management Software "ClockSniffer".....	3
6.2. 1. IP Configuration.....	4
6.2.2. Basic Information and settings .....	4
<b>7. Troubleshooting.....</b>	<b>5</b>
<b>7.1. The cock shows incorrect time.....</b>	<b>5</b>
<b>7.2. The management software fails to search out the clock.....</b>	<b>5</b>
<b>7.3. The clock can not synchronize with any time server.</b>	
<b>8. Warranty and Maintenance.....</b>	<b>5</b>
8.1. Warranty.....	5
8.2. Repair and Returns.....	5

### 1. Introduction of NTP and PoE

**Network Time Protocol (NTP)** is a networking protocol for clock synchronization between computer systems over packet-switched, variable-latency data networks. In operation since before 1985, NTP is one of the oldest Internet protocols in current use.

**PoE (Power over Ethernet)** is an exciting and relatively new technology that allows devices to get both power and data over standard network cabling. It is the same technology that powers Voice over Internet Protocol (VoIP) phones.

### 2. Safety Instructions

- To prevent injury, damage to the unit, or other harm, read this manual in its entirety before installing or operating the clock.
- Observe normal safety precautions and use appropriate safety equipment (safety glasses, gloves, ladders, etc.) when installing this product.
- Never install wiring during a lightning storm.
- Never install data jacks or electrical wiring in wet locations unless the equipment is specifically designed for that purpose.
- Be sure that mounting hardware is suitable for the mounting surface and sufficient to support the weight of the clock.
- Observe all local codes when installing the product.
- This product is not a toy! Please keep it out of the reach of children.
- Operation of this product in a manner inconsistent with the instructions in this manual may result in personal injury and damage to the product and will void the warranty.
- Do not use harsh cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not place this product on an unstable cart, stand, or table. The product may fall, causing injury or damage.

### 3. Specifications

Picture		
Model	GTD360-SA	GTD360-BP
Dimensions	Diameter: 38cm, Height: 5.1cm	Diameter: 34.8cm, Height: 7cm
Weight	1.3kg	0.62kg
Case	Aluminum in Silvery	Plastic in Black
Accuracy	+/- approximately 1 second	
Operating Temperature	-10°C to 70°C	
Operational Humidity	90% maximum, non-condensing	
Mounting Option	Surface	
Certification	CE, FCC, RoHS	

## **4. Installation**

### **4.1. Packing List**

One device of GTD360

### **4.2. Power Supply**

- 1) If the local network supports PoE, only one network cable is needed.
- 2) If not, a 5V/1A power adapter with a micro USB connector and a network cable is necessary.

**Remarks:** We can not connect the clock to both PoE and power adapter at the same time, otherwise the MCU of the clock will be damaged.

## **4. Working Status**

The working status of NTP analog clock includes localization, standstill, adjustment, normal working, loss of synchronization.

### **5.1. Localization**

When the clock is powered on, they system will find out the initial position if the three hands( at 12:00) by rotating as a result from unknowing the current position of the hands.

### **5.2. Standstill**

The hands will pause if the system can't get the present time from networks due to certain factors, such as malfunctioned networks, improper configuration after the status of localization and so on.

### **5.3. Adjustment**

The clock system will synchronize itself with the target time by a certain way after obtaining the present time. The hour and minute hands can adjust themselves by chasing and waiting. It will wait only when the adjusted target time lags the present time within several minutes. Under other conditions, it will synchronized with the target time by chasing. However, the seconds hand can only adjusts itself by waiting.

### **5.4. Normal Working**

It refers to the status that hands can run normally within a certain range of time accuracy.

### **5.5. Loss of Synchronization**

The seconds hand will jump two seconds per time if the clock system does not synchronized with the network for a long time after it steps into the status of normal working.

### **Notes.**

- 1) Under normal conditions, the analog clock will step into the status of localization immediately as soon as it is powered on, then it steps into the status of adjustment instantly once it obtains the present time from network, finally it steps into the status of normal working.
- 2) On condition that the clock fails to obtain the present time from the network because of malfunctioned networks or the improper configuration, then it will step into the status of standstill after the localization.
- 3) If the time zone is modified or the Daylight Saving Time is valid or canceled under the normal working condition, the clock will step into the status of adjustment. Then it goes to the status of normal working.
- 4) If the clock fails to obtain time information from the networks for a long time (30 minutes for testing) under the status of normal working , it will step into the status of loss of synchronization. The clock will step into the

status of normal working after the status of adjustment when it is synchronized again.

## 6. Configuration

### 6.1. Configuring an IP Address

There are two options to for configuring an IP Address to each GlobalTime clock:

- DHCP (Factory Default)
- Assigned Static IP v4 Address. The default IP of the clock is 192.168.2.55.

### 6.2. Management Software "ClockSniffer"


Download Link:

For 64-bit windows computer : [https://drive.google.com/open?id=18Cc-vs6XOuEyG3IhM\\_jxVjMLTImbuvc](https://drive.google.com/open?id=18Cc-vs6XOuEyG3IhM_jxVjMLTImbuvc)

For 32-bit windows computer: [https://drive.google.com/open?id=1Lis5qS-6OzSCjPV9Vs8Lvjo\\_8NfAdDG](https://drive.google.com/open?id=1Lis5qS-6OzSCjPV9Vs8Lvjo_8NfAdDG)

Notes:

- (1) Run the software as administrator
- (2) The default login password is Admin@GTC. It can be reset via the software.
- (3) After setting, please just click "Modify", no need to enter the Secret Key if you have not set a secret key.

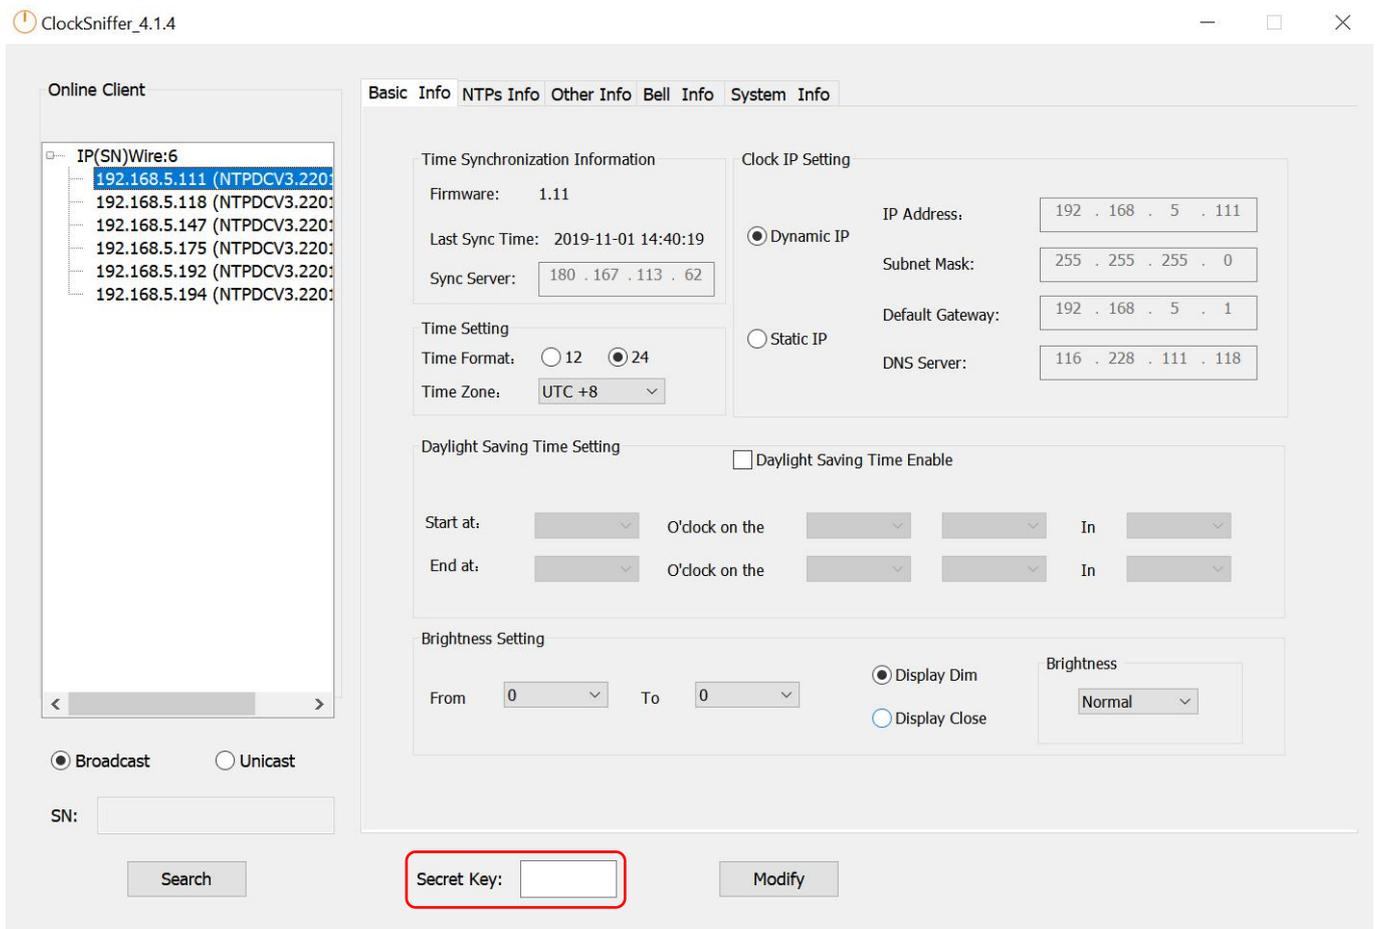

Online Client

IP(SN)Wire:6

- 192.168.5.111 (NTPDCV3.220:)
- 192.168.5.118 (NTPDCV3.220:)
- 192.168.5.147 (NTPDCV3.220:)
- 192.168.5.175 (NTPDCV3.220:)
- 192.168.5.192 (NTPDCV3.220:)
- 192.168.5.194 (NTPDCV3.220:)

Basic Info NTPs Info Other Info Bell Info **System Info**

Login Password

User Password Setting

Old Password:   show

New Password:   show

Confirm Password:   show

Secret Key

Secret Key Setting

New Key:   Show

Confirm Key:   Show

Update

Update

IP Address :  Mac Address :

Broadcast  Unicast

SN:

### 6.2.1. IP Search

The management software supports both Broadcast (255.255.255.255) and Unicast way to search out online client clocks. Broadcast is factory default.

- Broadcast

Select Broadcast, and click search, the software will automatically search online clock in the subnet, and group IPs based on different subnets.

- Unicast

Select Unicast, and input initial IP you want in the bar, then click Search, the software will search from the initial IP to the last one. For example, to search all clocks in subnet 192.168.3.0, you can input 192.168.3.001, and then search one by one till 192.168.3.254.

### 6.2.2. Basic Information and Settings

#### Password

On the old software, default user password is [admin](#). Global Password is for batch modification. Default password is [globalpw](#). Batch modification is under improvement currently, so please set the clocks one by one as possible. On the new software "ClockSniffer", no need of password.

#### Basic Setting

- ✓ Time Zone and Time Format
- ✓ Clock IP Setting
- ✓ NTP Setting
- ✓ Daylight Saving Setting

✓ User Password Setting

## 7. Troubleshooting

### 7.1. The clock shows incorrect time.

Check the host IP configuration and verify the network can communicate with the time server preset.

### 7.2. The management software fails to search out the clock.

Make sure that the user's computer and the clock are in the same subnet and the firewall is set correctly.

### 7.3. The clock can not synchronize with any time server.

The user should make sure that his network can visit the internet time source, and the time server is running its NTP service successfully.

GlobalTime has a software to help the user check that, if you need, please contact with us.

## 8. Warranty and Maintenance

### 8.1. Warranty

GlobalTime warrants the clocks to be free from defects in material and workmanship during a one-year period. The Warranty begins on the date the unit is shipped from GlobalTime. Extended warranties are available via certain agreements.

GlobalTime' liability under this Warranty is limited to repairing or replacing, at GlobalTime' option, the defective equipment and providing upgrade version changes for firmware. In case of repair, the product must be returned to an authorized GlobalTime Service Center.

This Warranty does not apply if repairs are required due to acts of nature beyond GlobalTime' control such as, but not limited to, lightning strikes, power surges, misuse, damage, neglect, or if repairs/ modifications have been made or attempted by anyone other than personnel authorized by GlobalTime.

**In no event will GlobalTime be liable for any indirect, special, incidental, or consequential damages from the sale or use of this product. This disclaimer applies both during and after the term of the warranty. GlobalTime disclaims liability for any implied warranties, including implied warranties of merchantability and fitness for a specific purpose.**

### 8.2. Repair and Returns

To obtain service under this warranty, contact GlobalTime at +86-21 36531186 or at the address below during the warranty period to receive a Return Material Authorization (RMA) number and shipping instructions. Then ship the product, transportation prepaid, for inspection.

Ship to:           GlobalTime  
                      Attn: RMA XXXXXX  
                      Floor 7, Building 4, No. 651, Wanfang Road, Minhang District, Shanghai, China / 201112  
                      Tel: +86-21 3653 1186

Typical equipment repair or replacement time is seven (10) business days, plus shipping times. One-way shipping is the Customer's responsibility. GlobalTime will return ship the equipment by the same means it was received.

GlobalTime will not be responsible for dismounting and remounting of the GlobalTime clock, for unauthorized returns or for returns that do not list the RMA number and quantity returned on a packing list attached in plain view on the outside of the shipping container.

We reserve the right to make changes at any time.

GlobalTime Electronic Co., Ltd

Add: Floor 7, Building 4, No. 651, Wanfang Road, Minhang District, Shanghai, China.

Tel: +86-21 3653 1186 Fax: +86-21 3653 1185

Web: [www.ntpclock.com](http://www.ntpclock.com)

Email: [contact@ntpclock.com](mailto:contact@ntpclock.com)